

 


Supplied with: Tower light, carry bag and USB charging cable.

Charging the floodlight



Charging Socket



Power bank to charge your phone



Battery Charging and Status Indicators

7 hours charging time.

The light can be used continuously when plugged into suitable 5V 2A power source but it will only operate on medium mode.

Setting up the Tower Pro:




1. Push button switch to unlock the tripod legs



2. Slide the tripod legs down.



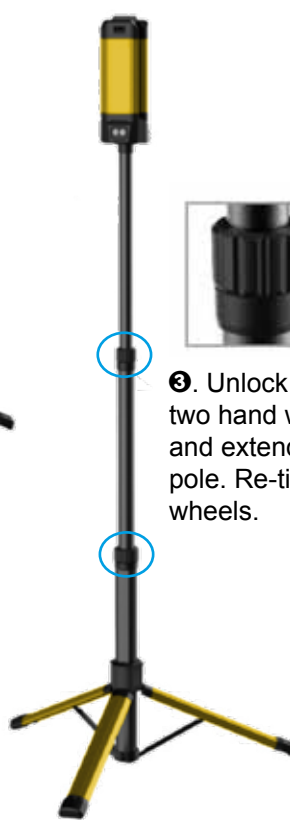

3. Unlock the two hand wheels and extend the pole. Re-tighten wheels.



4. Pull light heads from the bottom and rotate swivel to desired angle.

5. Press  button to turn the light ON/OFF.



6. Use this button to change light modes: Low  Medium  High

Removing the Tower Pro light head:

To use the hanging hook or magnetic base simple unscrew the light head from the tripod.



Hanging hook

Magnetic base



NightSearcher Limited
Unit 4 Applied House, Fitzherbert Spur, Farlington,
Portsmouth, Hampshire, PO6 1TT, UK
T: +44 (0)23 9238 9774
E: sales@nightsearcher.co.uk

To view and download the full manual in multiple languages please go to <https://nightsearcher.co.uk/en/products-manuals.html> Or scan this QR code.



If at any time, you need to dispose of this product or parts of this product: please note that waste electrical products, LEDs and batteries should not be disposed of with ordinary household waste. Recycle where facilities exist. Check with your local authority for recycling advice. Alternatively, NightSearcher is happy to take receipt of this product at end-of-life and will recycle it on your behalf.

All NightSearcher products have a 3-year standard warranty on all manufacturing defects and 1-year warranty on all rechargeable batteries from the date of purchase. Please visit www.nightsearcher.co.uk for extended warranty information, proof of purchase is required.

Product weight	3.5kg
Product size (mm)	800x100x95mm
NS Part No.	NSTOWERPRO-7K

